



Curved cord strap holder/receiver

Overview

The cord strap clips utilise a robust bungee cord to tourniquet to structures such as pillars, trees and scaffolding. The clip is available in two variants; a non-marking magnetic version which is designed to attach to angular surfaces, and a curved version to fit securely to poles and cylindrical surfaces. The cord strap clips are highly practical for indoor and warehouse environments, where they easily connect to shelving and pillars to both hold the XS Retractable Tape Unit and receive its tape end clip.

Key selling points


- Holds the XS Retractable Tape Unit via its connector points or receives any tape end clip
- Designed to attach to curved pillars or posts

Key features

- Soft pads to prevent scratching to surfaces
- Includes a surface protector to prevent damage to the back of the pillar

Product Specifications

Width: 131mm 5.2"	Height: 105mm 4.1"
Depth: 40mm 1.6"	Weight: 85g 3oz

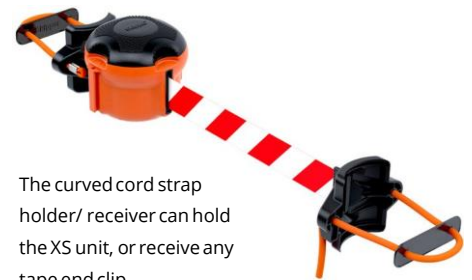

The curved cord strap holder/ receiver can hold the XS unit, or receive any tape end clip.

Product FAQs

Q. What is the tourniquet cord made from?

A. The tourniquet cord is made from 8mm diameter bungee cord, which is 600mm long. It has a stopper on one end to prevent the cord from slipping through one hole.

Q. How exactly does the cord strap holder/receiver work?

A. Simply hold the clip in position on the pillar, then thread the cord through the left hole, round the pillar, then back through the right hole. Then pull the cord down to tighten. Full instructions are provided.



Magnetic & cord strap holder/receiver

Overview

The cord strap clips utilise a robust bungee cord to tourniquet to structures such as pillars, trees and scaffolding. The clip is available in two variants; a non-marking magnetic version which is designed to attach to angular surfaces, and a curved version to fit securely to poles and cylindrical surfaces. The cord strap clips are highly practical for indoor and warehouse environments, where they easily connect to shelving and pillars to both hold the XS Retractable Tape Unit and receive its tape end clip.

Key selling points

- Holds the XS Retractable Tape unit via its connector points or receives any Retractable tape end clip
- Designed to attach to magnetic surfaces

Key features

- Soft pads to prevent scratching to surfaces
- Includes a surface protector to prevent damage to the back of the pillar
- Has magnets to attach to magnetic surfaces

Product Specifications

Width: 131mm 5.2"	Height: 105mm 4.1"
Depth: 19mm 0.7"	Weight: 100g 3.5oz



The magnetic and cord strap holder/receiver can hold the XS unit, or receive any tape end clip.

Product FAQs

Q. What is the tourniquet cord made from?

A. The tourniquet cord is made from 8mm diameter bungee cord, which is 600mm long. It has a stopper on one end to prevent the cord from slipping through one hole.

Q. How exactly does the cord strap holder/receiver work?

A. Simply hold the clip in position on the pillar, then thread the cord through the left hole, round the pillar, then back through the right hole. Then pull the cord down to tighten. Full instructions are provided.